

Chinch Sac Instructions

1) Supplies Needed

- Approximately $\frac{1}{2}$ - $\frac{3}{4}$ yard fabric
- 4 $\frac{1}{2}$ yard cording

2) Cuts - see cutting pieces in box on right

Cut 1 piece – 18" x 21" on fold

1. 1 piece – 18" x 18" on fold
2. 2 pieces – 3" x 18" = Sleeves
3. 2 pieces – 3" x 4" = Tabs or
2 -4" Ribbon
4. 2 pieces – 80" cording = Drawstrings




When Cutting Pieces:

Cut 1 on fold


18" wide x 21" High

This will allow you to cut a 3" strip off the top to give you 2 Sleeves and then cut 4" off end of sleeve to give you 2 tabs.

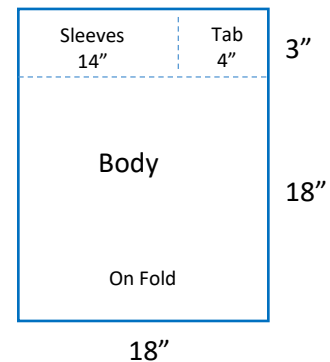

3) Sewing

1. Tab –with wrong sides together sewing down raw edge. Fold in half with seam in the middle and set aside.
2. Sleeve – sew side seams $\frac{1}{4}$ " folding to wrong side on both ends of both sleeves. Fold sleeve with wrong side together and dew as close to raw edge as possible, set aside.
3. Body – sew side seams together with right sides together.
Tabs –While sewing insert Tabs folded with raw edge matching raw edge of bag. Turn inside out.

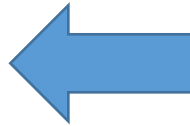

Tabs go into lower corners of bag. Fold them in half and insert with fold to inside, salvage in seam, & seamed edge toward bottom of bag. I also reinforced the tabs with a zig zag stitch.

4. Sleeves – place sleeves on body with raw edges matching the raw edge of the body making sure to center sleeve. About 2 2/8” from side seam on body, sew both sleeves to body. Fold down inside seam and sew. Top stitch making sure you do the sides between the sleeves.



5. Drawstring

- a. Insert 1 cord from right to left side of sleeve and then back left to right side. Centering cord down to tab – tie a knot above the tab, put one side of cord through tab, then tie another knot under the tab.
- b. Insert the 2nd cord left to right side of sleeve and then back right to left side. Centering cord down to tab – tie a knot above the tab, put one side of cord through tab, then tie another knot under the tab

